


AGILITY 50 2T WIRING DIAGRAM

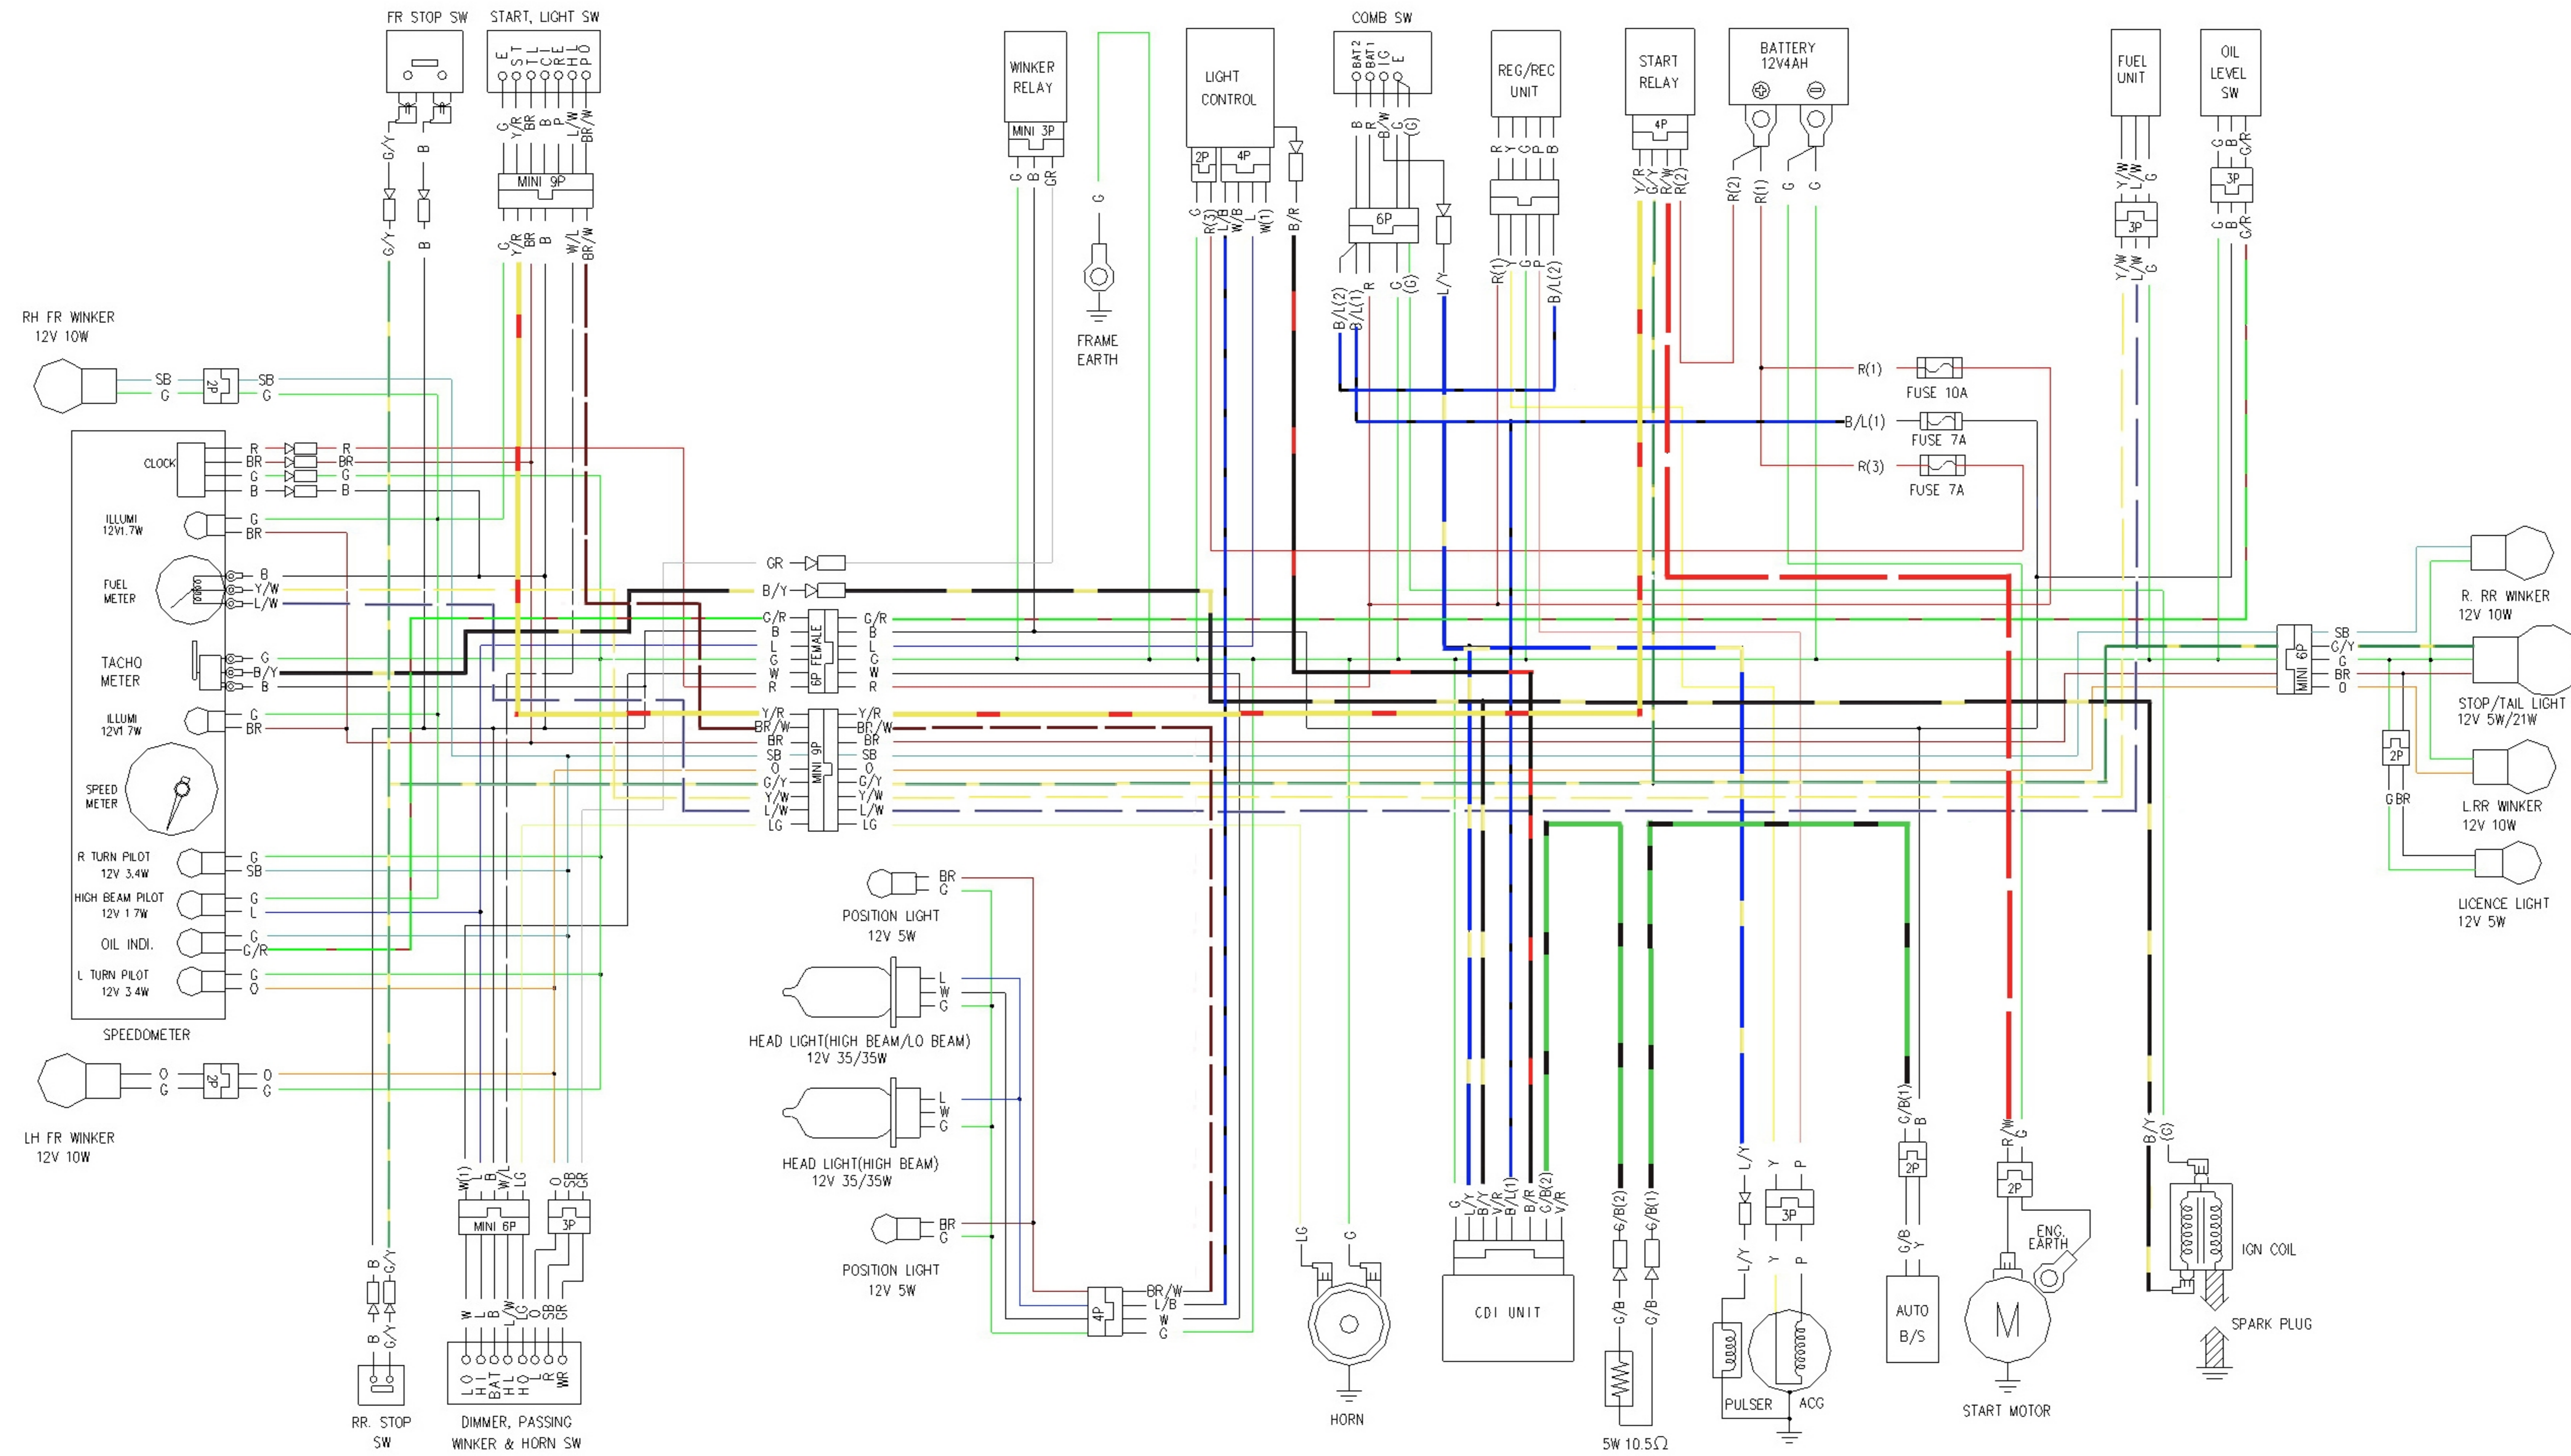

	CI	RE	TL	HL	PO
OFF	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
N	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
P	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
N	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
H	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
COLOR	B	BR	L/W	BR/W	

START SW

	ST	E
FREE	<input type="radio"/>	<input type="radio"/>
PUSH	<input type="radio"/>	<input type="radio"/>
COLOR	Y/R	G

PASSING SW

	HI	BAT
PASS	<input type="radio"/>	<input type="radio"/>
COLOR	L	B

HORN SW

	HO	BAT
FREE	<input type="radio"/>	<input type="radio"/>
PUSH	<input type="radio"/>	<input type="radio"/>
COLOR	LG	B

COMB SW

	BAT1	IG	E	BAT2
LOCK	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
OFF	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
ON	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
COLOR	R	B/W	G	B

WINKER SW

	R	L	WR
L	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
N	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
R	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
COLOR	SB	D	GR

DIMMER SW

	HL	HI	LO
LO	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
N	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
HI	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
COLOR	B	L	W