
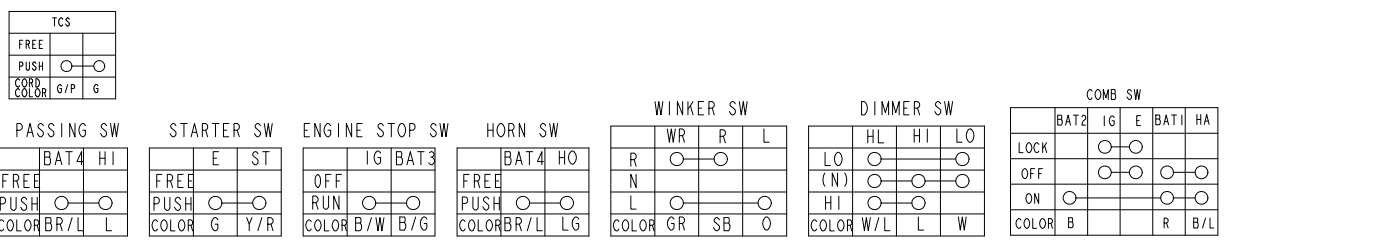


FUSE A: 15A WINKER,FR/RR STOP, HORN, METER, STARTER, POSITION, USB
 FUSE B: 10A IGNITION, IGN COIL, FUEL PUMP, ANGLE DETECTOR SENSOR, FAN MOTOR
 FUSE C: 10A ABS ECU
 FUSE D: 30A CHARGING
 FUSE E: 15A HEAD LIGHT, COLCK
 FUSE F: 25A ABS

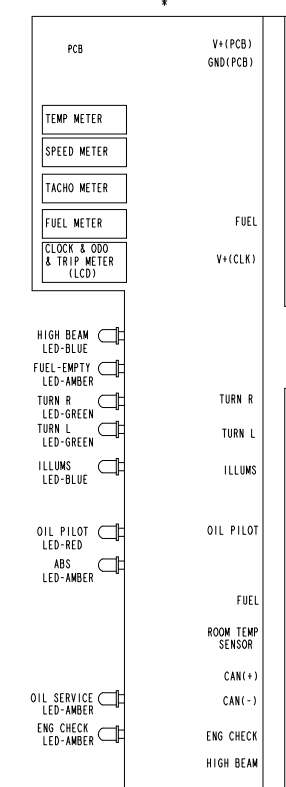

B-A1 STEPPER A.N (D)	B-D1 VSENS2(TPS)	B-G1 TILT SIGNAL	B-K1 TIA	B-N1	B-O1 PGND 1
B-A2 STEPPER A.P (A)	B-D2 VSENS1(MAP, TILT)	B-G2 MODE SW	B-K2	B-N2	B-O2
B-A3 STEPPER B.N (B)	B-D3 TPS SIGNAL	B-G3 TPS SIGNAL	B-K3 THERMO	B-N3 MIL	B-O3 IGNITION COIL
B-A4 STEPPER B.P (C)	B-D4 YBK	B-G4 CPS (+)	B-K4	B-N4 INJ-1	B-O4 VBR
B-B1	B-E1 MANIFOLD AIR PRESSURE	B-H1 O2 SIGNAL	B-L1	B-O1 KILL SW	PIN P1 FUNCTION
B-B2 SIDE STAND SW	B-E2 SEND1(TPS)	B-H2	B-L2	B-O2	
B-B3 BRAKE SW	B-E3	B-H3	B-L3	B-O3	
B-B4 MAIN RELAY	B-E4 CAN-HIGH(+)	B-H4 CPS (-)	B-L4	B-O4	
B-C1	B-F1 CAN-HIGH(+)	B-J1 SEND1(TILT)	B-M1	B-P1 PGND 2	
B-C2 SEND2(MAP)	B-F2	B-J2 SEND3(THERMO, TIA, O2)	B-M2	B-P2	
B-C3 START SW	B-F3	B-J3	B-M3	B-P3 FUEL PUMP RELAY	
B-C4 VBR	B-F4 CAN-LOW(-)	B-J4 FAN RELAY	B-M4 O2 HEAT	B-P4 STARTER RELAY	
PIN P1 FUNCTION	PIN P1 FUNCTION	PIN P1 FUNCTION	PIN P1 FUNCTION	PIN P1 FUNCTION	