


MXU 300

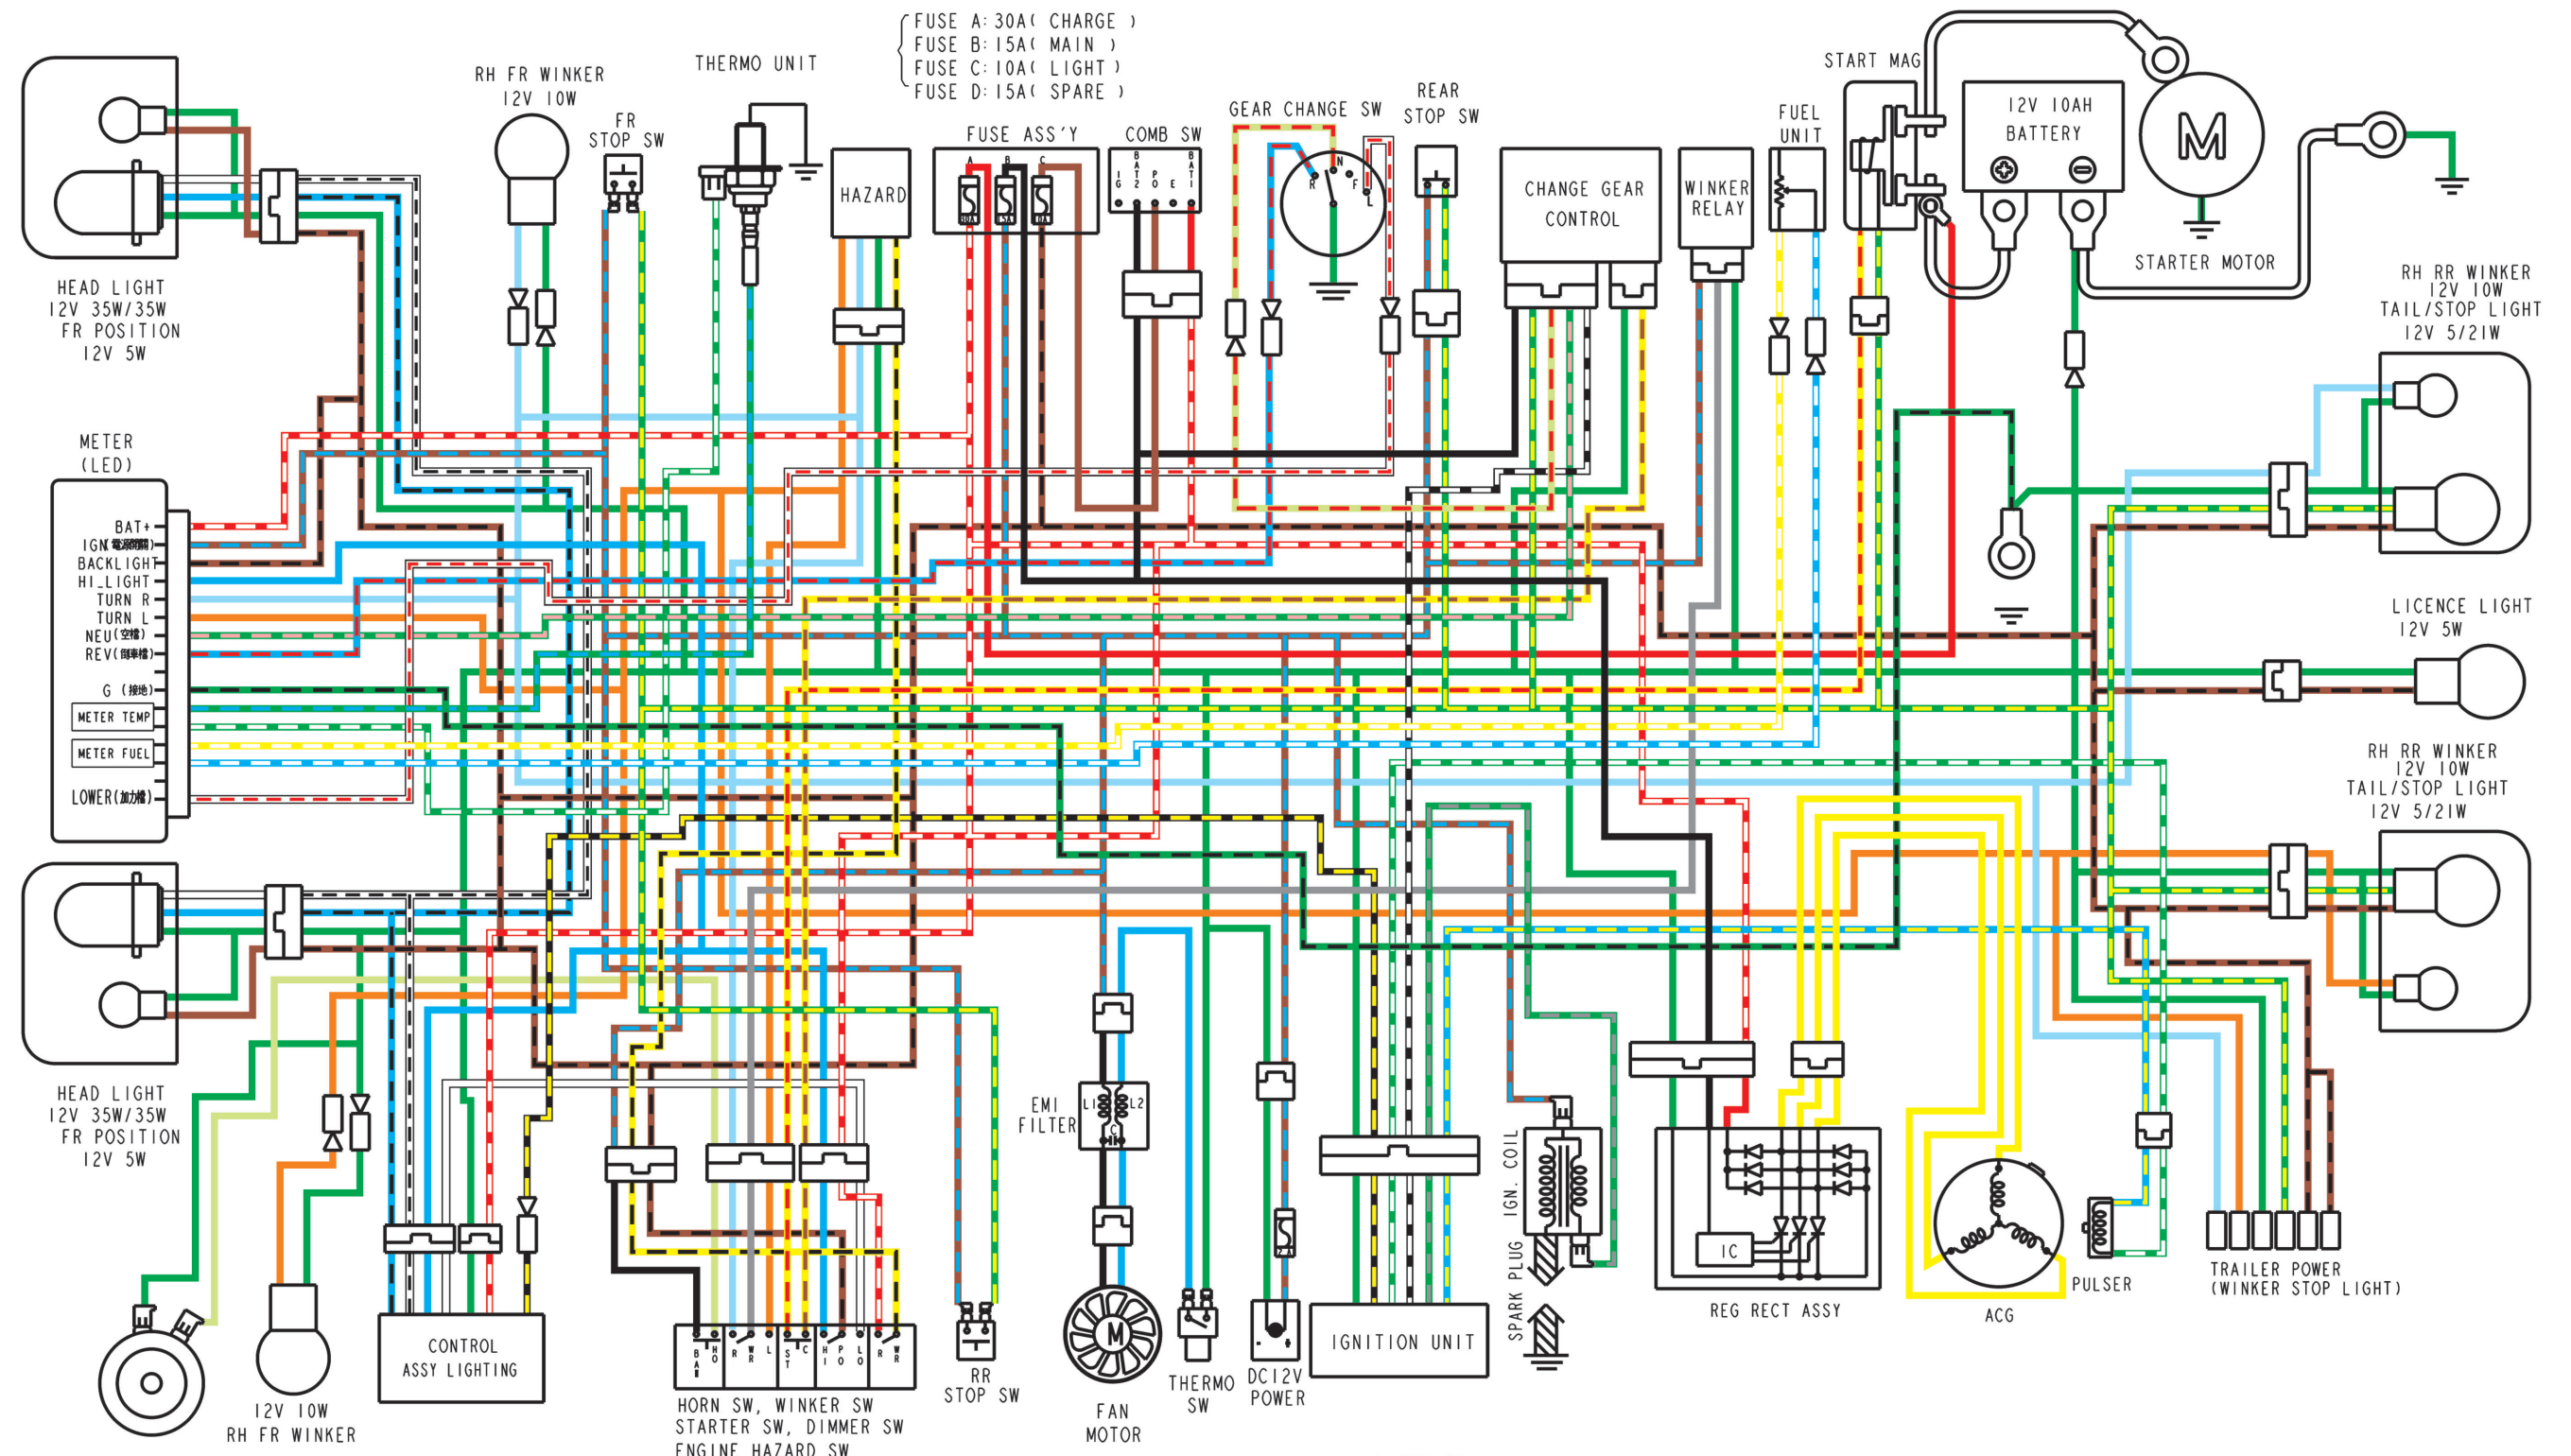

HORN SW

| | | |
|-------|----|-----|
| | HO | BAT |
| FREE | | |
| PUSH | ○ | ○ |
| COLOR | LG | B |

WINKER SW

| | | | |
|-------|----|---|----|
| | R | L | WR |
| L | | ○ | ○ |
| R | ○ | | ○ |
| COLOR | SB | O | GR |

START SW

| | | |
|-------|-----|------|
| | ST | C |
| FREE | | |
| PUSH | ○ | ○ |
| COLOR | Y/R | Y/BR |

LIGHT SW

| | | | |
|-------|------|----|----|
| | PO | LO | HI |
| ☰ | ○ | | |
| ☷ | ○ | | ○ |
| ☶ | ○ | | ○ |
| COLOR | BR/B | W | L |

HAZARD SW

| | | |
|-------|-----|-----|
| | BAT | HA |
| △ | ○ | ○ |
| ● | | |
| COLOR | R/W | Y/B |

COMB SW

| | | | | | |
|-------|-----|---|------|------|----|
| | IG | E | BAT1 | BAT2 | PO |
| OFF | ○ | ○ | | | |
| ON | | | ○ | ○ | |
| PO | | | ○ | ○ | ○ |
| COLOR | B/W | G | R | B | BR |

| | | | |
|---|--------|----|-------------|
| B | BLACK | BR | BROWN |
| G | GREEN | GR | GRAY |
| O | ORANGE | SB | SKY BLUE |
| L | BLUE | LG | LIGHT GREEN |
| W | WHITE | | |
| Y | YELLOW | | |
| R | RED | | |

- YELLOW
- SKY BLUE
- GREEN / RED
- BROWN / WHITE
- BLUE / YELLOW
- BLUE
- GRAY
- BLACK / YELLOW
- BLUE / BLACK
- RED
- LIGHT GREEN
- YELLOW / WHITE
- BLACK / WHITE
- WHITE / YELLOW
- WHITE
- BLACK
- GREEN / BLUE
- RED / YELLOW
- GREEN
- BROWN
- BLUE / WHITE
- RED / YELLOW
- GREEN / YELLOW
- ORANGE
- BROWN / BLUE
- GREEN / WHITE
- WHITE / BLUE
- RED / BLACK
- BLACK / RED
- YELLOW / BLACK