



FUSE A: 15A WINKER FAN/RELAY STOP/IGNITION POSITION/DC POWER SOCKET/OIL CONTROLLER LAMP  
 FUSE B: 10A ABS/IGN FAN/FAN RELAY/ECU RELAY STARTER RELAY  
 FUSE C: 25A ABS/IGN/12V  
 FUSE D: 10A ABS/IGN/12V  
 FUSE E: 15A HEAD LIGHT/CORNER/LOAD/LUGGAGE BOX LIGHT  
 FUSE F: ABS/IGN/12V

FUNCTION	SW. NO.	WIRING	RELAY/ACTUATOR
IGNITION SW.	1	B/W	IGNITION SW. RELAY
STARTER SW.	2	W/Y	STARTER RELAY
PASSING SW.	3	W/Y	WINKER RELAY
STATER SW.	4	W/Y	STARTER RELAY
ENGINE STOP SW.	5	W/Y	STOP RELAY
HORN SW.	6	W/Y	HORN RELAY
WINKER SW.	7	W/Y	WINKER RELAY
DIMMER SW.	8	W/Y	DIMMER RELAY
COMP SW.	9	W/Y	COMP. RELAY
LOCK SW.	10	W/Y	LOCK RELAY
LIGHTING SW.	11	W/Y	TAIL LIGHT RELAY

FUNCTION	SW. NO.	WIRING	RELAY/ACTUATOR
BATTERY CHARGE	12	B/W	BATTERY CHARGE RELAY
HEADLIGHT	13	B/W	HEADLIGHT RELAY
FUEL	14	B/W	FUEL PUMP RELAY
WINKER	15	B/W	WINKER RELAY
STARTER	16	B/W	STARTER RELAY
STOP	17	B/W	STOP RELAY
HORN	18	B/W	HORN RELAY
DIMMER	19	B/W	DIMMER RELAY
COMP.	20	B/W	COMP. RELAY
LOCK	21	B/W	LOCK RELAY
TAIL LIGHT	22	B/W	TAIL LIGHT RELAY