


Downtown 350i E4 Wiring diagram



FUSE A: 15A WINKER,FR/RR STOP,HORN,METER,STARTER,POSITION,USB
 FUSE B: 10A IGNITION,IGN COIL,FUEL PUMP,ANGLE DETECTOR SENSOR,FAN MOTOR
 FUSE C: 10A ABS ECU
 FUSE D: 30A CHARGING
 FUSE E: 15A HEAD LIGHT,COLCK
 FUSE F: 25A ABS

PIN NO.	NAME	FUNCTION	PIN NO.	NAME	FUNCTION
01	IGP	IGNITION POWER	19	FAN	FAN RELAY
02	LG1	LOGIC GROUND 1	20	ISCBP	IDLE SPEED CONTROL 0
03	MEGO	MEGO SENSOR	21	ISCBP	IDLE SPEED CONTROL 4
04	SG	SENSOR GROUND	22	WIL	MULTI INDICATOR LAMP
05	TH	THROTTLE POSITION SENSOR	23	CRK-M	CRANK PULSE SENSOR GND
06	VCC	SENSOR POWER OUTPUT(+5V)	24	TW	WATER TEMP. SENSOR
07	-	-	25	-	-
08	FLPR	FUEL PUMP RELAY	26	ROLL	ROLL SENSOR
09	PG1	POWER GROUND 1	27	PM	MANIFOLD PRESSURE SENSOR
10	PG2	POWER GROUND 2	28	SOL	SOLENOID OUTPUT
11	IG	IGNITION COIL	29	ME	METER
12	CRK-P	CRANK PULSE SENSOR	30	X-LINE	DIAGNOSTIC TOOL
13	-	-	31	ISCBN	IDLE SPEED CONTROL 7 / B
14	TA	AIR TEMP. SENSOR	32	ISCBN	IDLE SPEED CONTROL 7 / A
15	TEST	-	33	MEGO WI	MEGO SENSOR WATER
16	INJ	INJECTION	-	-	-
17	VSP	VEHICLE SPEED SENSOR	-	-	-
18	-	-	-	-	-

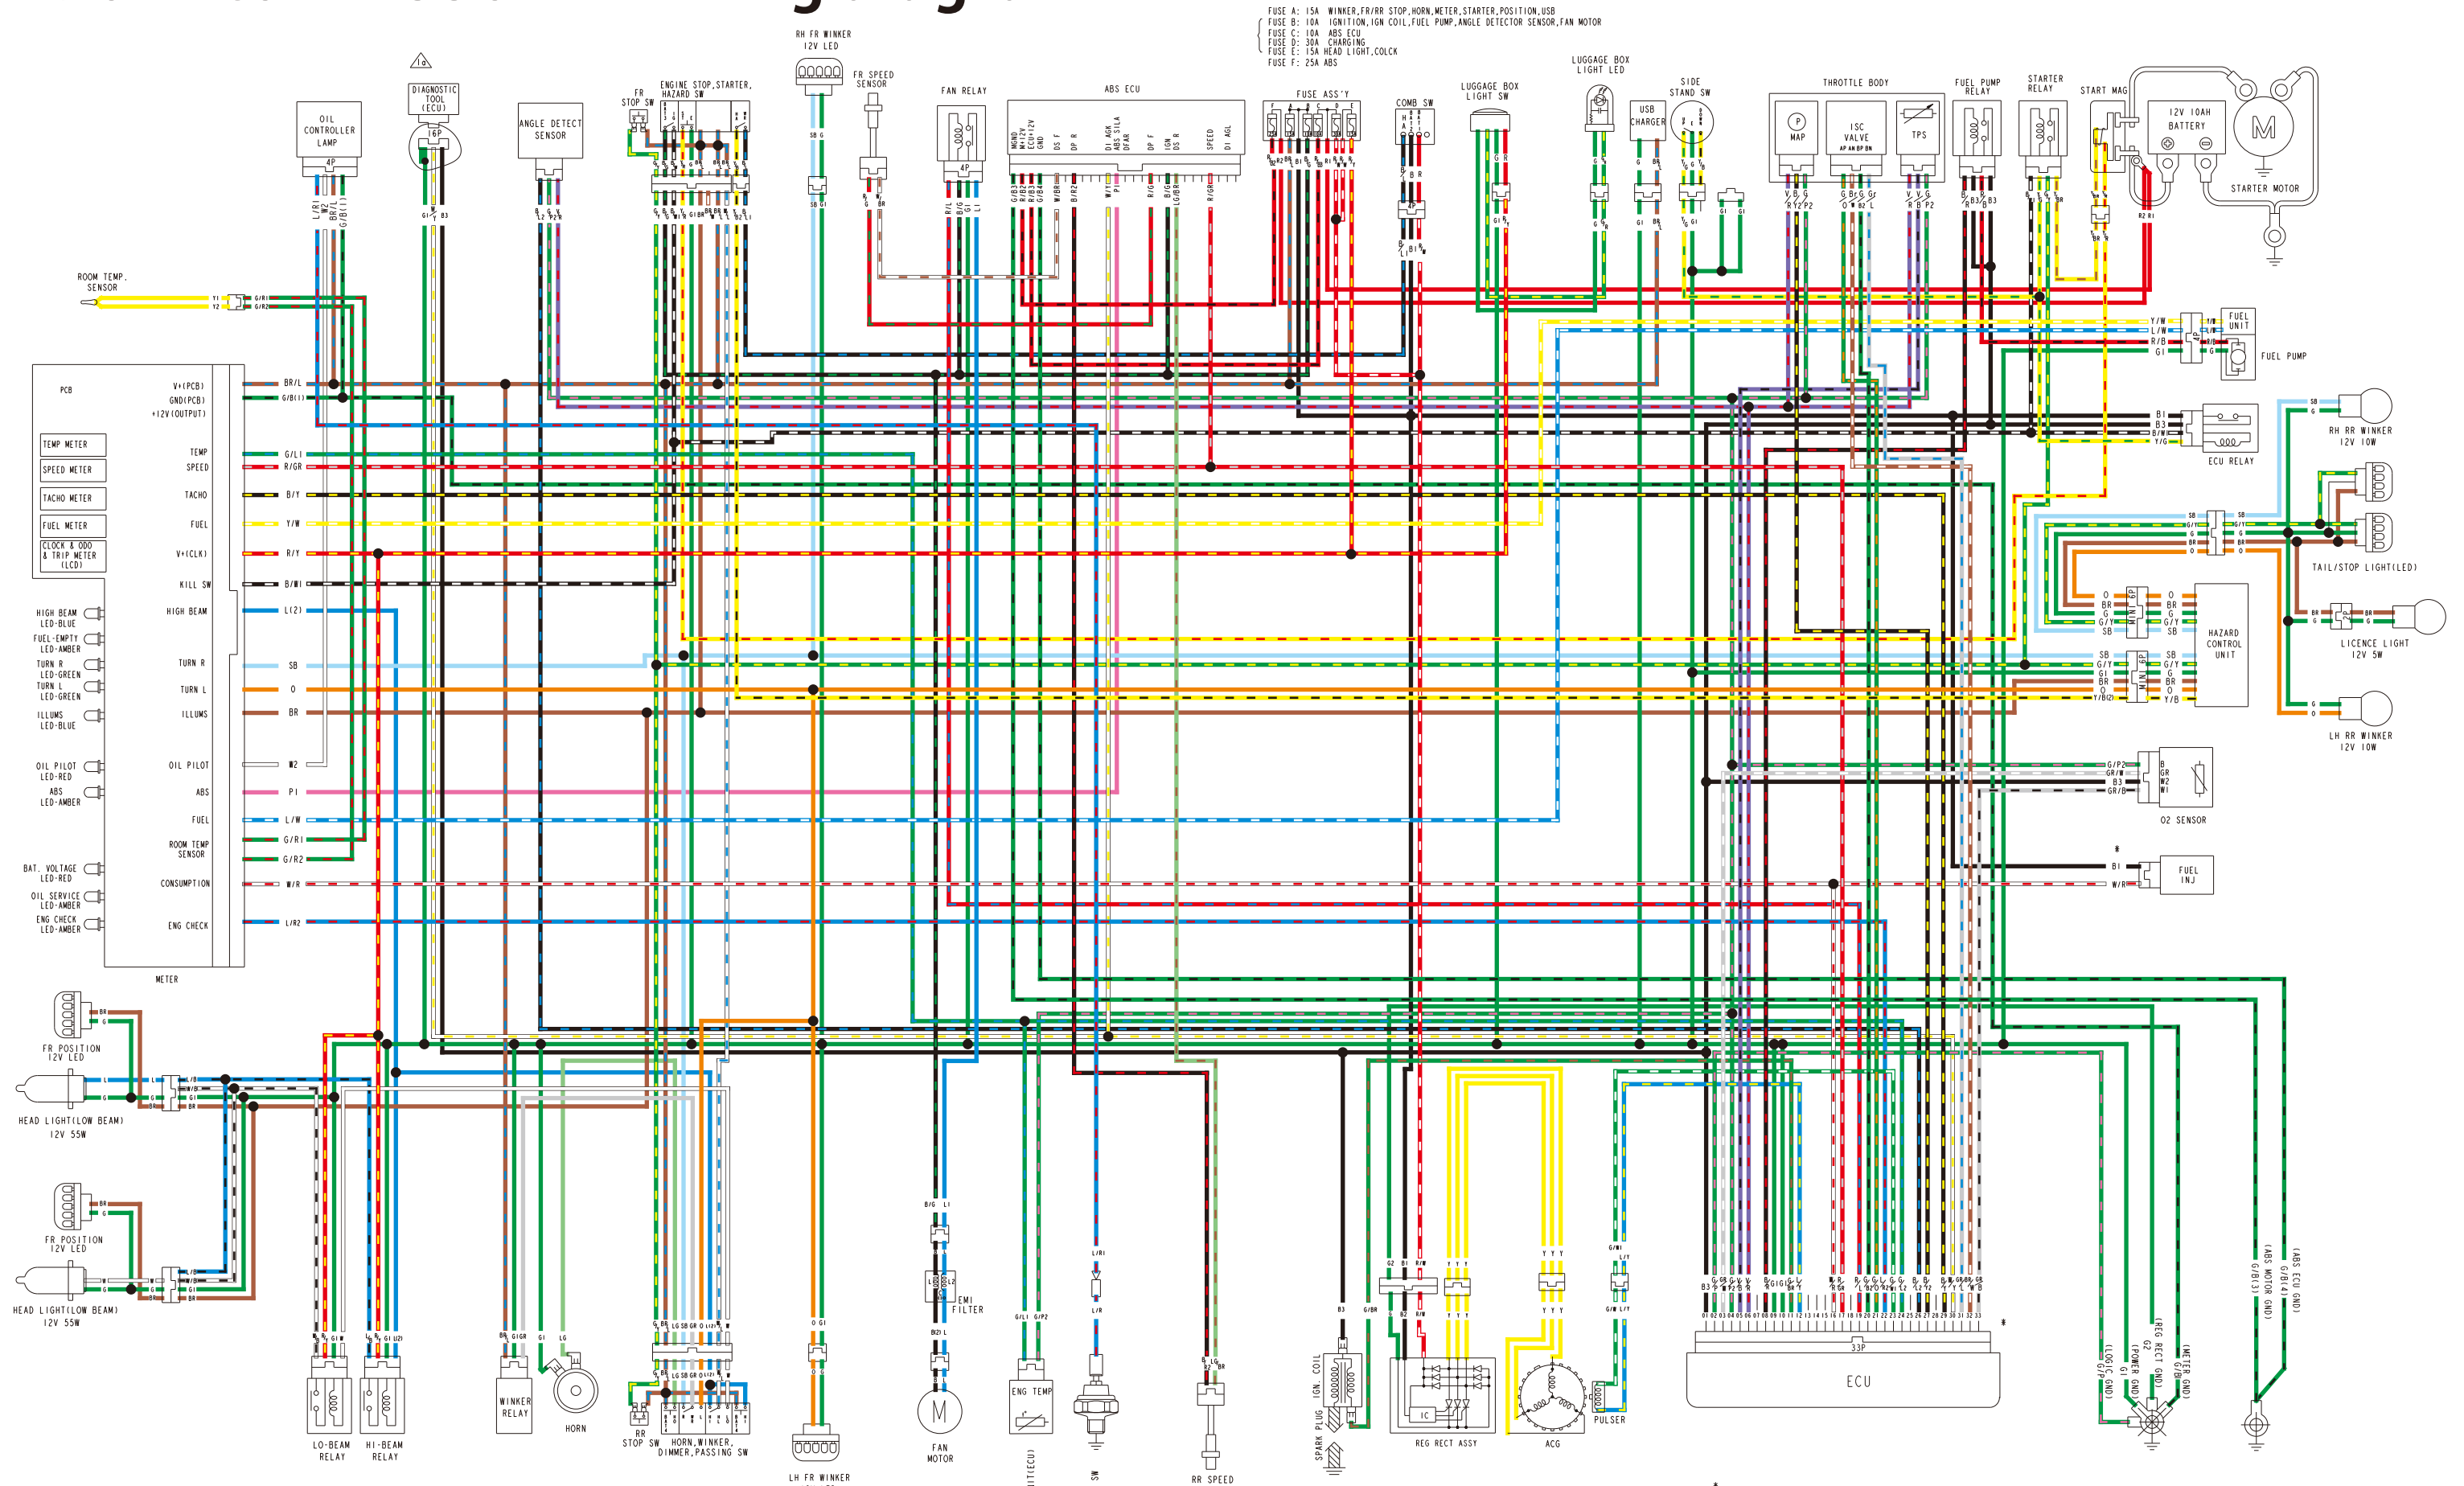