


MXU 150

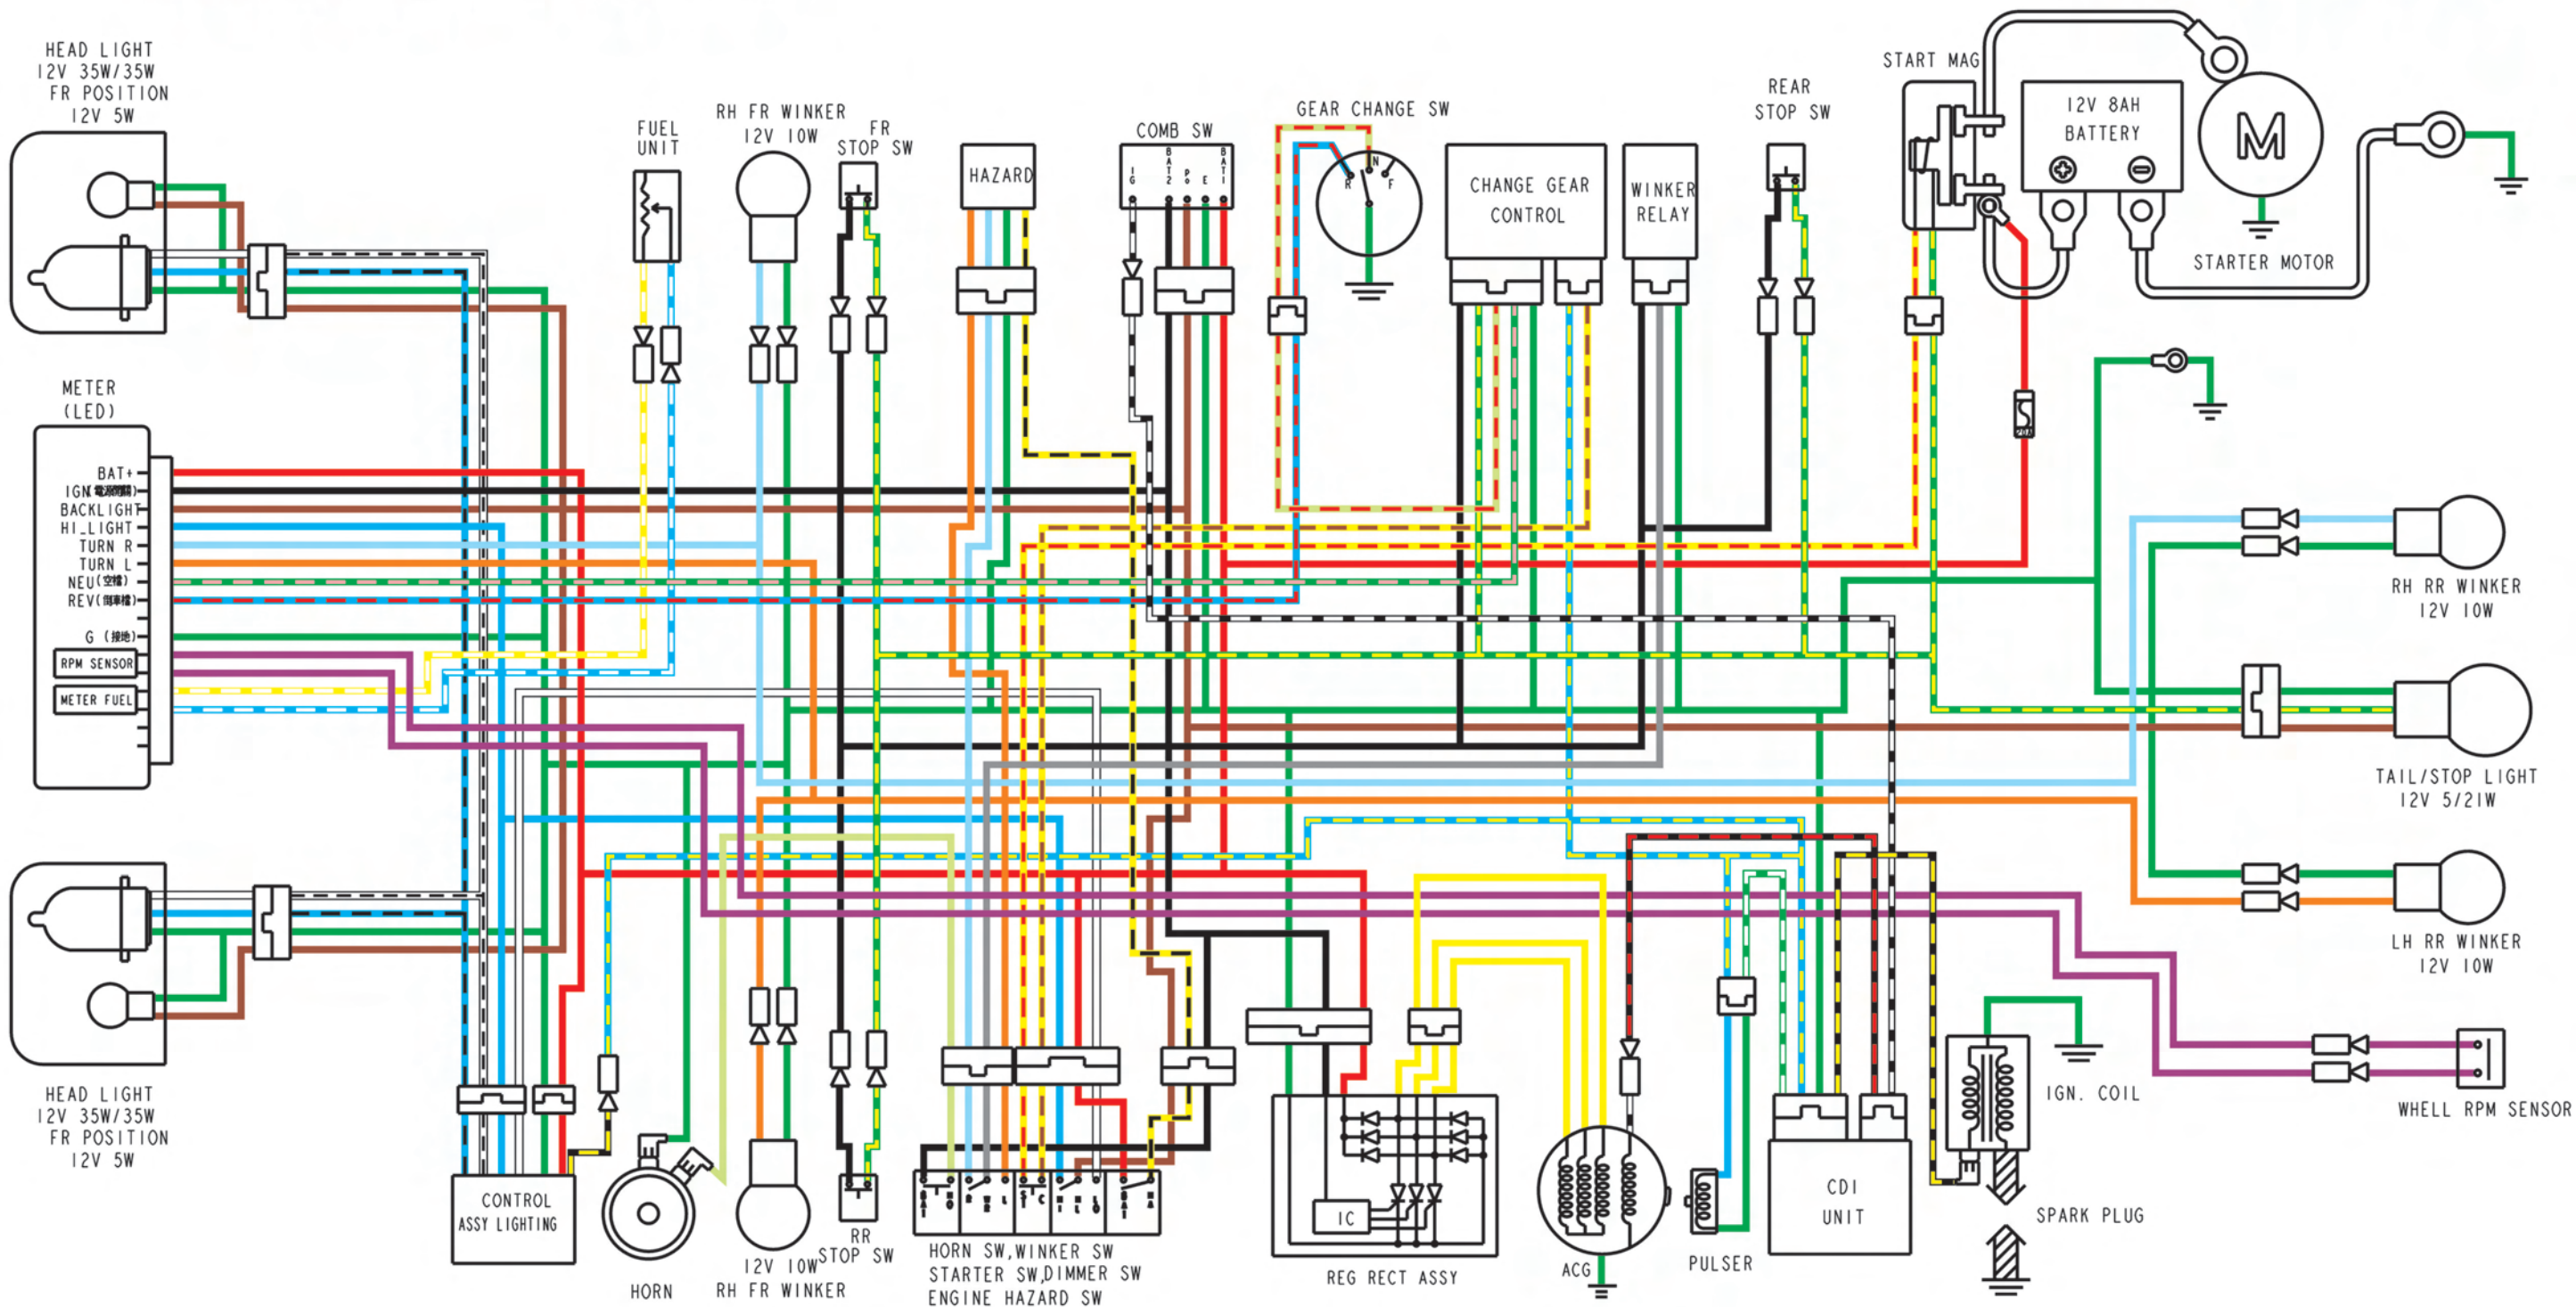

HORN SW		START SW		WINKER SW			DIMMER SW			HAZARD SW		COMB SW					COLOR CODE																															
	HO	BAT		ST	C		R	L	WR	PO	LO	HI		BAT	HA	IG	E	BAT	BAT2	PO	B	BLACK	BR	BROWN	G	GREEN	GR	GRAY	O	ORANGE	SB	SKY BLUE	L	BLUE	LG	LIGHT GREEN	W	WHITE			Y	YELLOW			R	RED		
FREE			FREE			L				☺	☺		☺	☺		OFF	☺	☺	☺																													
PUSH	☺	☺	PUSH	☺	☺	R	☺	☺		☺	☺	☺	☺	☺		ON																																
COLOR	LG	B	COLOR	Y/R	Y/BR	COLOR	SB	O	GR	COLOR	B	W	L	COLOR	R	Y/B	COLOR	B/W	G	R	B	BR																										

- YELLOW
- SKY BLUE
- GREEN / RED
- BROWN / WHITE
- BLUE / YELLOW
- BLUE
- GRAY
- BLACK / YELLOW
- BLUE / BLACK
- RED
- LIGHT GREEN
- YELLOW / WHITE
- BLACK / WHITE
- WHITE / YELLOW
- WHITE
- BLACK
- GREEN / BLUE
- RED / YELLOW
- GREEN
- BROWN
- BLUE / WHITE
- RED / YELLOW
- GREEN / YELLOW
- ORANGE
- BROWN / BLUE
- GREEN / WHITE
- WHITE / BLUE
- RED / BLACK
- BLACK / RED
- YELLOW / BLACK